

CELERO 5G[®] ***VELOCITY[™]***



User Guide

Contents

Getting started	4
Getting to know your phone	4
Setup	6
Install a Nano SIM/microSD card	6
Charge the battery	7
Turn your phone on and off	8
Complete the setup screens	8
Home screen	9
Status bar	10
Notification panel	11
Quick Settings panel	11
Making connections	12
Phone	12
Make a call	12
Receive a call	12
Call settings	12
Call log	12
Contacts	13
Add a contact	13
Edit a contact	13
Delete a contact	13
Share a contact	13
Contacts settings	13
Messages	13
Send a text message (SMS)	13
Send a multimedia message (MMS)	14
Messages settings	14
Gmail	14
Receive an email	14
Compose an email	14
Email settings	14
Internet and social networking	15
Chrome browser	15
Facebook	15
YouTube	16
Connectivity	16
USB	16
Wi-Fi	16
Bluetooth	17
NFC	17
Apps and entertainment	18
Camera and video	18

Take a photo	20
Record a video	20
Camera settings	20
Photos	21
Productivity	22
Calendar	22
Google Maps	22
Clock	23
Useful settings	24
Languages	24
Date & time	24
Display	25
Wallpaper & style	26
Sound & vibration	26
Digital Wellbeing & parental controls	27
Security	27
About phone	28
Software update	28
Safety and use	29
Regulatory agency identifications	31
FCC Regulations	31
RF Exposure Information (SAR)	31
Hearing Aid Compatibility (HAC)	32
CELERO5G VELOCITY LIMITED WARRANTY	33

Getting started

The topics in this section will introduce you to your phone, help you get set up with service, provide an overview of the phone screen, and get you started with basic phone operations.

Getting to know your phone



Note: Your phone's screens and app layouts are subject to change. This user guide uses sample images only.

 
Part	Description
Headset port	Plug in a headset (sold separately) to listen to music or for convenient, hands-free conversations.
SIM and microSD™ tray	Insert your Nano SIM card and microSD (sold separately) for service and additional storage.
Receiver	Hear the caller and automated prompts.
Front camera	Take pictures and record videos while facing the screen.
Touch screen	• View information needed to operate your phone. • Access your phone's features and applications.
Microphone	Transmit your voice electronically for a call, voice recording, etc.
USB Type-C	Connect the USB cable (included) for charging, or connect other accessories.
Speaker	Listen to calls, automated prompts, and music.
Volume keys	Adjust the volume for ringtones, media, notifications, and system sounds.
Power key	Power key • Press to turn the screen on or off. • Press and hold to turn the phone on. • Press along with the Volume up key to turn the phone off. • Press along with the Volume down key to take a screenshot.
	Fingerprint sensor Unlock your phone with a touch of your finger.
Rear cameras	• Take pictures and record videos. • Use features such as the slow motion, time lapse, panorama mode, and more.
Flash	• Brighten photos taken indoors or at night. • Use as a flashlight to see in dark areas.

CAUTION! Inserting an accessory into the incorrect port may damage the phone.


Setup

Install a Nano SIM/microSD card

1.Insert the included SIM PIN to eject the SIM tray.

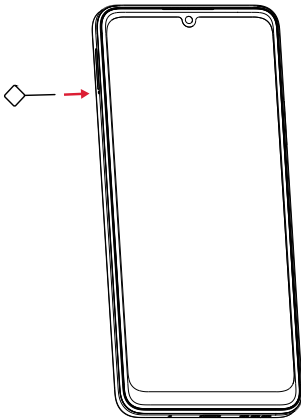

 
2.Place or remove the Nano SIM card and microSD™ card with the metal contacts facing down into the tray. Gently slide the SIM tray back into the slot.

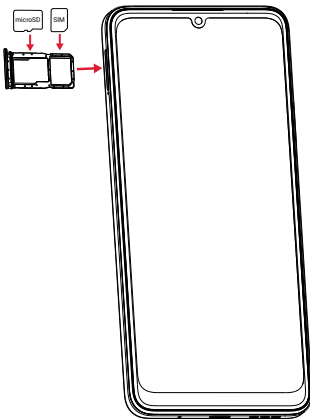

Note: The microSD™ card is sold separately.

Charge the battery

 1. Connect one end of the data cable to the USB Type-C port located on the bottom of your phone.

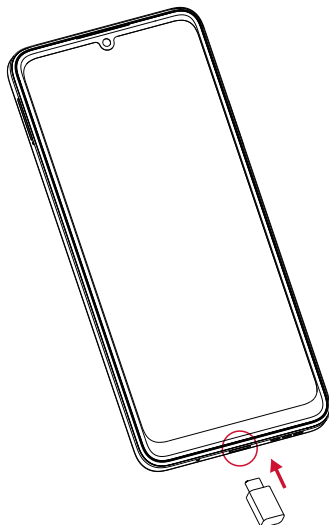

2. Connect the other end to the power adapter.
3. Plug the power adapter into an electrical outlet to fully charge your phone.

Note: The power adapter is sold separately.

Optimize your battery life

To optimize your battery life, you can make the following adjustments:

- **Turn on power saving mode:** Go to **Settings > Battery > Battery Saver**, and slide the Use Battery Saver switch to the **On**  position.
- **Lower screen brightness:** Go to **Settings > Display > Brightness level**, and slide the brightness bar to the left.
- **Screen timeout:** Go to **Settings > Display > Screen timeout**, and select proper timeout duration.

Turn your phone on and off

The instructions below explain how to turn your phone on and off.

 
Turn your phone on

Press and hold the **Power** key until the device turns on.

Turn your phone off

There are two ways you can use to turn your phone off.

- Press the **Power** key and the **Volume up** key at the same time, and tap **Power off**.
- Swipe down on the Status bar twice to enter Quick Settings panel, and tap **Power icon**  > **Power off**.

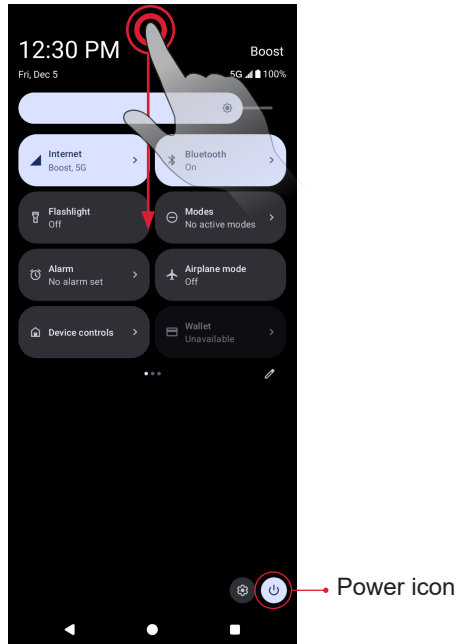

Complete the setup screens

Once your phone is powered on, you will need to run Setup.

 
The Setup Wizard will appear to guide you through the basic settings on your device.

Follow the instructions to finish your phone setup.

Home screen

The Home screen is the starting point for your phone's applications, functions, and menus. You can customize your Home screen by adding application icons, shortcuts, folders, and more.

Your Home screen extends beyond the initial screen. To add a new Home screen, drag an app icon to the right edge of the main screen and release the icon.

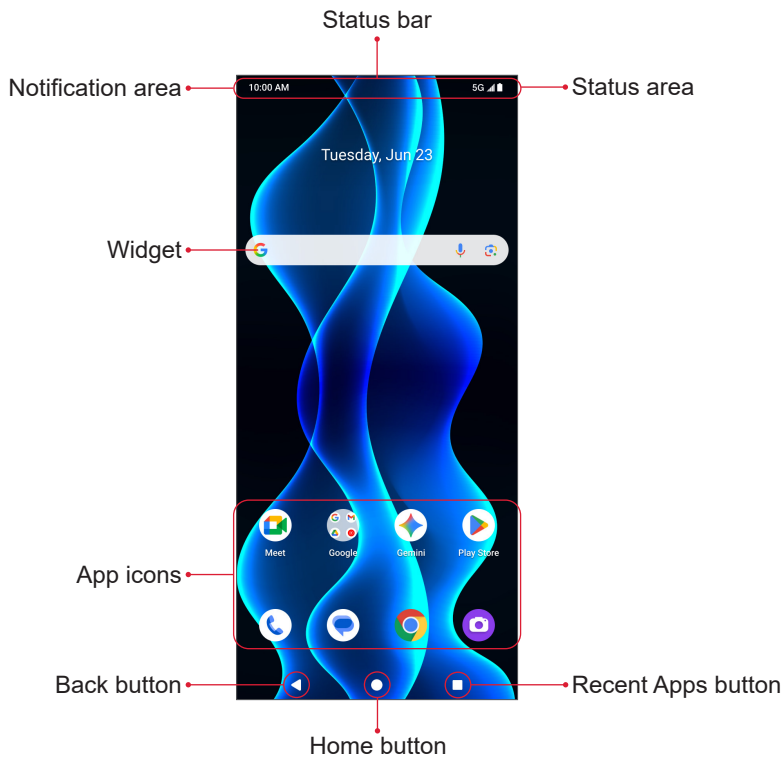

Item	Description
Status bar	Icons indicate your phone's status (on the right side) and notifications (on the left side).
Notification area	View notifications for incoming messages, missed calls, application updates, and more. Drag the Status bar down to display the Notification panel.
Status area	View phone and service status information such as signal strength, battery status, Wi-Fi and data connectivity, and ringer status.
Widgets	Add customizable quick access to app functions on your phone's Home screen.

Item	Description
App icons	Add shortcuts to your favorite apps to the home screen.
Back button	Tap to return to the previous screen.
Home button	Tap to display the main Home screen.
Recent Apps button	• Tap to display a list of recently used apps. • Double-tap to swap between your last two used apps.

Status bar

The Status bar at the top of the Home screen provides phone and service status information on the right side and notification alerts on the left.

Status icons (Right side)			
3G	3G data service		Network (full signal)
4G LTE	4G LTE data service		Wi-Fi® enabled
5G	5G data service		Hotspot on
	Battery (full charge)		GPS in use
	Battery (charging)		Airplane mode enabled
	Mute on		NFC™ enabled
	Bluetooth® earphone connected		Wi-Fi® Calling enabled
Notification icons (Left side)			
	Download		Missed call
	New voicemail		New Email
	Warning		New text or MMS message
	Update successful		Wi-Fi network available

 
Note: Not all status and notifications icons are listed on the table above.

Notification panel


1. Swipe down on the Status bar to open the Notification panel.
2. To check notifications, tap an item in the list.
3. Swipe left or right on a notification to delete it, or tap **Clear all** to clear all event-based notifications (other ongoing notifications will remain).
4. To close notification panel, swipe up or tap the **Back** button ◀.

Quick Settings panel

1. Swipe down on the Status bar again from the Notification panel.
2. Tap a setting to turn it on or off.
3. You can tap **Settings** ⚙️ to access full settings or tap **Power off** 🔌 to turn your phone off.

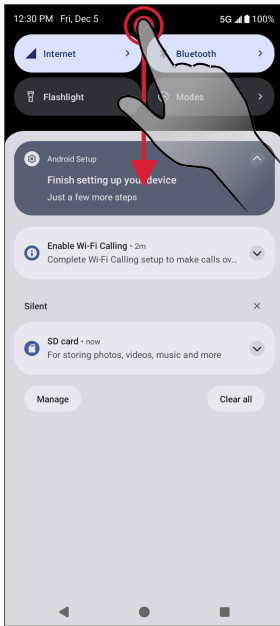

Notification panel

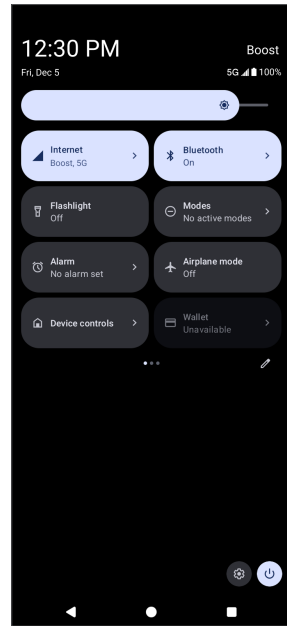 

Quick Settings panel

Making connections

The topics in this section will explain how to make connections, including making phone calls, managing contacts, sending messages, using email, and more.

Phone

Make a call

1. From the Home screen, tap **Phone** .
 2. Tap  to open the dialpad.
 3. Enter a phone number in the keypad and tap  to make a call.
- During a call, you can tap  at the bottom of the screen to hang up.
- You can place phone calls directly from your contacts list, recent calls, and favorite list.

Receive a call

The Incoming call screen is displayed when a call is received, along with the caller's numbers and other information you've entered for that contact.

- To answer a call, swipe  right.
- To reject a call, swipe  left.
- Press any side key to mute the ringer.
- Any missed calls are logged in **Missed** tab.

To answer a call when your screen is unlocked, tap .

Reject a call and send a text message

You can reject an incoming call and automatically send a quick response text message to the caller.

1. When a call arrives, tap .
2. Tap one of the messages or write your own to send to the caller.

You can edit the preset quick responses by tapping  > **Settings** > **Quick responses** and edit the quick responses.

Call settings

1. From the Home screen, tap **Phone** .
2. Tap  > **Settings** to adjust your call settings.

Call log

1. From the Home screen, tap **Phone** .
2. On the  Home tab, you can view the complete list of your call history.
3. You can tap a call log entry to display more options.

Contacts

From the Home screen, swipe up to access Apps and tap **Contacts** .

Add a contact

1. From the **Contacts** screen, tap  to add a contact.
2. Use the keyboard to enter information. When you are finished, tap **Save**.

Edit a contact

1. From the **Contacts** screen, tap a contact to view its details.
2. Tap **Edit**  on the top right corner of the screen.

Delete a contact

1. From the **Contacts** screen, tap a contact to view its details.
2. Scroll down and tap **Delete**.

Share a contact

You can quickly share contacts using Bluetooth, Gmail, or text messages.

1. From the **Contacts** screen, tap a contact to view its details.
2. Scroll down and tap **Share contact**.
3. Confirm the contact information you'd like to share and tap **Continue**.
4. Select how you'd like to share the contact information card (vCard).

Contacts settings

On top right corner of the **Contacts** screen, tap  or Google Account avatar when signed in > **Contacts settings** to adjust your contacts settings.

Messages

Send instant messages, media, and more with text and multimedia messages.

From the Home screen, tap **Messages** .

Send a text message (SMS)

1. From the Messages screen, tap .
2. Enter a contact name or mobile number in the **To** field and tap the text box and compose your message.
3. When done, tap **Send**  to send the text message.

Note: Your text message automatically becomes a multimedia message if you enter an email address as the recipient, attach an item, or compose a very long message.

Send a multimedia message (MMS)

1. From the Messages screen, tap .
2. Fill in one or more recipients and tap the text box to compose your message.
3. Tap  to the left side of the text box to add location, contacts, or files.
4. Tap **Send**  to send the MMS message.

Messages settings

Tap  on the top right corner of the Messages screen and tap **Messages settings** to adjust your messages settings.

Gmail

Use Gmail to send, receive, and manage your email messages. Before using Gmail, you must sign into your Google Account on your phone. From the Home screen, swipe up to access **Apps** and tap **Gmail** .

Note: You can use the Gmail app to manage email for other accounts, such as Hotmail, Outlook, Exchange, and more.

Receive an email

When a new email is received, you will see  in the Status bar. Drag the Status bar down to display the Notification panel and tap the new message to view it.

Compose an email

1. From the Gmail screen, tap  to compose a new email message.
2. Enter the message recipient(s), subject, and message, and then tap **Send** .

Email settings

You can access settings for the Gmail app and for your individual email accounts from the Gmail settings menu.

1. From the Gmail screen, tap  > **Settings**.
2. Tap **General settings** to access settings for all accounts, or tap an account name to configure settings for a specific email account.

Internet and social networking

The following topics describe how to connect to and use the Internet on your phone and how to access popular social networking sites.

Chrome browser

From the Home screen, tap **Chrome**  to browse the Internet, search for information, and bookmark your favorite web pages for convenient access.

Browsing web pages

1. Tap the address field.
2. Enter a web address or a keyword to browse for web pages.

Adding a bookmark

1. Open the web page you want to bookmark.
2. Tap  > .

Opening a bookmark

1. From the Chrome browser screen, tap  > **Bookmarks**.
2. Select the bookmark of the website you want to view.

Customizing browser settings

1. From the Chrome browser screen, tap  > **Settings**.
2. In the Settings list, you can select options to customize the browser.

Tip: For more information, visit: google.com/intl/en/chrome/browser/mobile/.

Facebook

Post updates, see what your friends are up to, upload pictures and check-ins, and more with on-the-go Facebook access.

1. From the Home screen, swipe up to access **Apps** and tap **Facebook** .
2. Enter your mobile number or email and password and tap **Log In**, or tap **Create new account** to join Facebook.
3. Once completed, your Facebook account will be added to your phone.

Once you've either created an account or signed in, you can post and view updates, upload pictures, tag locations, and more, all from your phone.

From the **Facebook** screen, tap **What's on your mind?** to type an update. You can also share photos and videos, start a live video, scroll through your Facebook feed, and more.

YouTube

View videos uploaded to YouTube and upload your own videos.

1. From the Home screen, swipe up to access **Apps** and tap **YouTube** .
2. Browse YouTube channels and tap a video to view.
3. The video will play on your phone screen. Tap the screen to pause or resume play while watching.

You can post videos to your YouTube account from your phone.

1. Tap **Record/Post Video** .
2. Select a video to upload, record a new video to upload, or stream a live video. Enter a title, description, and tags, and select a privacy setting.

Connectivity

The following topics address your phone's connectivity options, including USB file transfer, Wi-Fi, Bluetooth, and more.

USB

You can use the USB cable to connect your phone directly to your computer and transfer music, photos, and other content files.

1. Connect your phone to your computer using the USB cable.
2. Swipe the Status bar down to display the Notification panel and tap **Charging this device via USB**.
3. Tap **File Transfer**. You can also select other options available.
4. On your computer, navigate to the detected device and open it.
5. If available, select a drive (**Internal shared storage** or **SD card**).
6. Select a folder and copy files from your computer to your phone or from your phone to your computer. When done, disconnect your phone from your computer.

Wi-Fi

To use your phone's Wi-Fi, you need access to a wireless access point or hotspot.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Network & internet** > **Internet**.
3. Slide the Wi-Fi switch to the **On**  position to enable Wi-Fi.
4. Tap a Wi-Fi network to connect, enter the password (if applicable), and then tap **Connect**.
5. Your phone will be connected to the Wi-Fi network. You will see  in the status bar.

Bluetooth

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Connected devices** > **Connection preferences** > **Bluetooth**.
3. Slide the Bluetooth switch to the **On**  position.

Pair Bluetooth devices

1. From the Connected devices screen, tap **Pair new device**.
2. Tap a device under Available devices and follow the on-screen instructions to pair with the device.
3. You can now tap a paired device to connect.

To forget a paired device

1. From the Connected devices screen, tap **Settings**  next to the device you wish to forget.
2. Tap **Forget** > **Forget device**.
3. The device will be unpaired from your phone.

Share files via Bluetooth

You can use Bluetooth to transfer files between your phone and another Bluetooth-enabled device, such as a phone or computer. Send photos, videos, calendar events, contacts, and more.

NFC

Allow data exchange when the phone touches another NFC-capable device.

 
1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Connected devices** > **Connection preferences** > **NFC**.
3. Slide the switch to the **On**  position to turn it on.

Apps and entertainment

The topics in this section will explore the features that make your phone so much more than a phone, from the camera and productivity apps to music, entertainment, and more.

Camera and video

You can use the camera or video camera to take and share photos and videos.

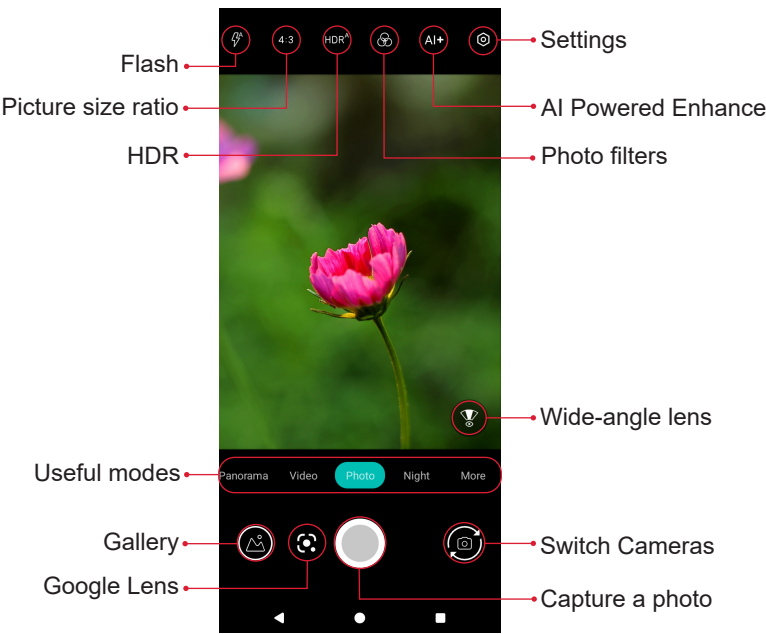

On-screen icons

Icons		Function/Service
	Settings	Select camera modes and settings options.
	Flash	Activate or deactivate the camera flash.
	Picture size ratio	Set the photo quality and aspect ratio.
	HDR enhance	Activate or deactivate High Dynamic Range enhance mode for clearer, more vivid photos.

Icons		Function/Service
	Photo filters	Choose from a variety of photo color filters.
	AI Powered Enhance	Automatically detect various scenes and adapt the proper settings or parameters like brightness and contrast, color saturation, de-noise, etc.
	Wide-angle lens	Capture more detail in landscape photos.
	Gallery	View the last photo or video taken.
	Google Lens	Use Google Lens to find or search what you see in your camera.
	Capture	Capture a photo.
	Switch cameras	Switch between the front and back cameras.

Useful modes

Modes	Function/Service
Panorama	Capture more of the scene by combining images to create a panoramic photo.
Video	Record videos and access video settings.
Photo	Capture photos and access camera settings.
Night	Optimize photos in low-light conditions.
More	• Time lapse: Record videos over a long period of time than speed it up for a fast action moment. • Slow motion: Record videos in slow motion. • Motion photo: With motion photos, you can get the flexibility of a recording with the same image quality you expect. • Professional: Manually adjust settings such as shutter speed, ISO, white balance, focus, etc. for professional quality photos.

Note: Camera options vary based on mode, camera in use, etc.

Take a photo

1. From the Home screen, tap **Camera** . You can also access the Camera with one of the following methods:

- From the Home screen, swipe up to access **Apps** and tap **Camera** .
- Press the **Power** key twice quickly.

2. Tap **Photo** to switch to Photo mode.

3. Aim the camera at your subject and tap  or press the **Volume** key to take the photo.

Record a video

1. From the Camera screen, tap **Video** to switch to Video mode.

2. Aim the camera at your subject and tap  or press the **Volume** key to start recording a video.

3. Tap  to hold the recording and tap  to resume. Tap  to stop recording and save your video. To take a picture during the recording, tap .

Camera settings

 
You can adjust your camera's settings using the icons on the main camera screen and the full camera settings menu.

1. From the Home screen, tap **Camera** .

2. Tap **Settings** .

Photos

Using the **Photos**  app, you can view photos and watch videos that you've taken, downloaded, or copied onto your storage card or phone memory. For pictures that are on your storage card or phone memory, you can do basic editing such as rotating and cropping.

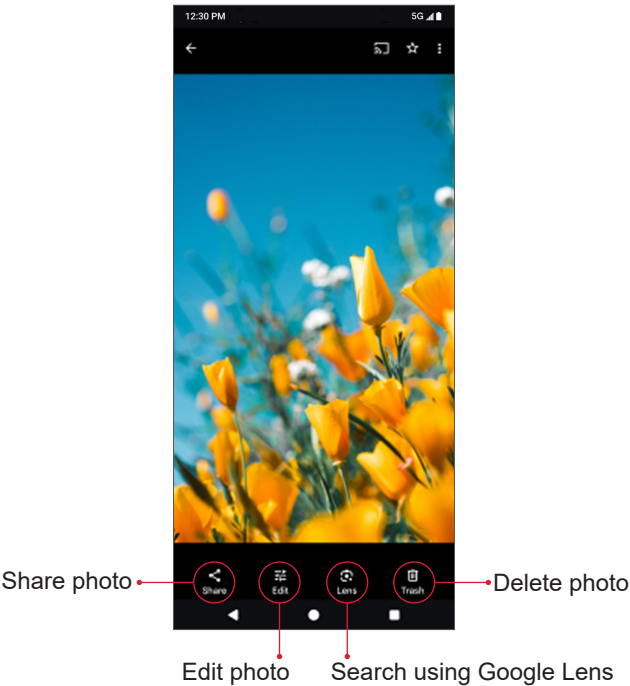

Edit photos

1. From the Home screen, swipe up to access **Apps** and tap **Photos** .
2. Tap the picture you want to edit.
3. Tap  to access the Edit screen.
4. When finished, tap **Save as copy** to save a copy of your photo.

Productivity

Use your phone to stay productive and organized with calendar, navigation, alarm, office, and more productivity apps.

Calendar

Use the Calendar to create and manage events, meetings, and appointments.

From the Home screen, swipe up to access **Apps** and tap **Calendar** . You can view calendar in Schedule, Day, 3 days, Week, or Month view.

Add an event

1. From the Calendar screen, tap **Add**  to add an event.
2. Enter event details, and then tap **Save**.

Edit an event

1. From the Calendar screen, tap a date and an event to view the details.
2. Tap **Edit**  to edit the event and tap **Save** to save.

Delete an event

1. From the Calendar screen, tap a date and an event to view the details.
2. Tap **Options**  > **Delete** to delete the event.

Calendar settings

1. From the Calendar screen, tap  > **Settings** > **General**.
2. Tap an option to adjust Calendar settings.

Google Maps

Explore and navigate your world with Google Maps. Find places you'll love, connect with businesses you're interested in, and get around with real-time traffic information.

Search for destinations

Use Google Maps to locate and map a specific address or destination.

1. From the Home screen, swipe up to access **Apps** and tap **Maps** .
2. Tap **Search here**.
3. Enter an address, city, facility name, etc., then choose a search result. You will see your location on the map.

Google Maps operations

- **View current location:** Tap  to find your current location on the map.
- **Explore nearby venue categories:** Tap **Explore**  to browse nearby venues by selecting a category such as restaurants, parks, hotels, and more.
- **Select map types for different views:** Tap **Map Type**  and choose your map view, or select to view map details such as traffic, street view, etc.

- **Find a route to your destination:** Tap **Directions** , enter your desired start location and destination, and tap a method of transportation (car, public transit, or on foot) for a list of step-by-step directions to your destination.

Clock

The Clock app allows you to set alarms, view different world times, use a stopwatch, set a timer, manage your bedtime, and use your phone as a desk clock.

From the Home screen, swipe up to access **Apps** and tap **Clock** .

Create a new alarm

1. Tap **Alarms**  > .
2. Set the time for the alarm and tap **OK**.

World clock

1. Tap **World Clock**  >  to access the World clock screen.
2. Type to enter a city name and select the city you want to add from the list. To remove a city, swipe the city to the left side.

Timers

1. Tap **Timers**  to access the Timers screen.
2. Enter the amount of time into the Timer.
3. Tap  to begin timing. Tap  to pause it.
4. Tap  to reset the timer back to previous set time. Tap  to delete the timer. Tap  to add another timer. Swipe up and down to view other active timers.

Stopwatch

1. Tap **Stopwatch**  to access the Stopwatch screen.
2. Tap **Start** to begin the stopwatch. Tap **Stop** to stop it. Tap **Reset** to reset the stopwatch to zero. Tap **Lap** to add lap splits.

Bedtime

1. Tap **Bedtime**  to access the Bedtime screen.
2. Tap **Get started** to set your sleep time and wake-up time.
3. There are the following options for you to manage your sleep:
 - **See recent bedtime activity:** Keep track of your screen time and see estimates of time spent in bed. This is based on when your phone remained motionless in a dark room.
 - **Listen to sleep sounds:** You can play soothing music to help you fall asleep. Sleep sounds don't play automatically.
 - **See your upcoming events:** To make sure your alarm is set before any events, allow **Clock** to access your calendar.

Note: You can select **Modes > Bedtime** from the Quick Settings Panel to enable or disable this mode quickly and easily.

Useful settings

Languages

Set the language for the phone's menus.

1. From the Home screen, swipe up to access **Apps** and tap **Settings > System**.
2. Tap **Language & region > System languages**.
3. View your languages.
 - When more than one language has been added, you can touch and hold the language, then drag it up to the first position to set as the default display language.
 - To add a language, tap **Add a language**, then select the language you want to add.
 - To remove a language, tap  > **Remove**.

Date & time

From the Home screen, swipe up to access **Apps** and tap **Settings > System > Date & time**.

Automatic date and time

From the Date & time screen, slide the **Automatic date and time** switch to the **On**  position to use network-provided date and time.

When Automatic date and time turned off, you can tap **Date** or **Time** to manually select your date and time.

Automatic time zone

From the Date & time screen, slide the **Automatic time zone** switch to the **On**  position to use network-provided time zone.

When Automatic time zone turned off, you can tap **Time zone** to manually select your time zone.

Use location for time zone

From the Date & time screen, slide the **Use location for time zone** switch to the **On**  position to use location to set the time zone.

Use 24-hour format

From the Date & time screen, slide the **Use 24-hour format** switch to the **On**  position to enable the 24-hour time format.

Display

Use the phone's Display settings menu to adjust items such as brightness, screen timeout, and more.

From the Home screen, swipe up to access **Apps** and tap **Settings > Display**.

Brightness level

1. From the Display screen, tap **Brightness level**.
2. Drag the slider to adjust the brightness level manually.

Adaptive brightness

1. From the Display screen, tap **Adaptive brightness**.
2. Slide the switch to the **On**  position to enable Adaptive brightness.
3. When turned on, your phone will automatically adjust screen brightness based on the lighting conditions.

Lock screen

1. From the Display screen, tap **Lock screen**.
2. Manage what to show and when to show on the lock screen.

Screen timeout

1. From the Display screen, tap **Screen timeout**.
2. Set screen timeout interval. Your screen will automatically go to sleep after the set amount of time.
3. You can slide the **Screen attention** switch to the **On**  position to prevent your screen from turning off if you're looking at it.

Dark theme

From the Display screen, slide the **Dark theme** switch to the **On**  position to enable the dark theme.

Display size and text

1. From the Display screen, tap **Display size and text**.
2. Drag the sliders to adjust the font size and display size, slide the switches to enable bold text and high contrast text. You can also tap **Reset settings** to reset display size and text to phone's original settings.

Night Light

From the Display screen, slide the **Night Light** switch to the **On**  position to enable Night Light. When enabled, you can set a Night Light schedule and intensity.

Color contrast

From the Display screen, tap **Color contrast**. You can select from Default, Medium, or High based on the preview effect. Slide the **Outline text** switch to the **On**  position to enable outline text, which will change the text color to black or white for maximum contrast with the background.

Auto-rotate screen

From the Display screen, slide the **Auto rotate screen** switch to the **On**  position to enable screen rotation.

Smooth display

From the Display screen, slide the **Smooth Display** switch to the **On**  position to automatically raise the refresh rate up to 90 Hz for some content. Enable this function will increase battery drain.

Screen saver

From the Display screen, tap **Screen Saver** to set the screen saver, adjust screen saver settings.

Wallpaper & style

Change the wallpaper

1. From the Home screen, swipe up to access **Apps** and tap **Settings > Wallpapers & style**.

Tip: You can also access the Wallpaper & style menu from the Home screen. From the Home screen, touch and hold an empty space, then tap **Wallpapers & style**.

2. Tap **More wallpapers**, select the wallpaper from your photos or standard wallpapers folders.

3. Tap **Set wallpaper** at the bottom right side of the screen and choose to set the wallpaper on the Home screen, Lock screen, or both.

Change the color theme

1. From the Home screen, swipe up to access **Apps** and tap **Settings > Wallpapers & style**.

2. Choose desired color theme. You can tap  to view more color themes.

- **Wallpaper colors:** Select the desired color combination which comes from the set home screen and lock screen wallpapers.
- **Other colors:** Select the desired basic color.

Sound & vibration

Control your phone's audio, from ringtones and alerts to tap tones and notifications.

1. From the Home screen, swipe up to access **Apps** and tap **Settings**.

2. Tap **Sound & vibration**.

3. Drag the sliders to adjust the media, call, notification, ring, and alarm volumes.

Phone ringtone

1. From the Sound & vibration screen, tap **Phone ringtone**.

2. Select a ringtone for incoming phone calls. You can customize your own ringtone by tapping **Add ringtone**.

Digital Wellbeing & parental controls

From the Home screen, swipe up to access **Apps** and tap **Settings > Digital Wellbeing & parental controls**.

Your Digital Wellbeing tools

Use app timers and other tools to keep track of screen time and unplug more easily.

View app activity details

View your screen time and set timers for your apps.

Ways to disconnect

- **App timers:** Set time limits for apps.
- **Bedtime mode:** Set a bedtime schedule to disconnect from your phone and avoid interruptions while you sleep.
- **Focus:** Pause distracting apps when you need time to focus.
- **Screen time reminders:** Turn on screen time reminders.

Reduce interruptions

- **Manage notifications:** Enable or disable the notifications of apps.
- **Heads Up:** Prompt you to stop staring at your phone while walking. Follow the steps to set up Heads Up feature.

Show icon in the app list

Slide the switch to the **On**  position to enable icons in the app list.

Parental controls

Add content restrictions and set other limits to help your child balance their screen time. From the Digital Wellbeing & parental controls screen, tap **Set up parental controls**. Follow the screens to finish the setup.

Security

The Security settings will help you to secure your device, protect your data, and keep your privacy.

From the Home screen, swipe up to access **Apps** and tap **Settings > Security & privacy**.

Screen lock

You can set up a screen lock to help secure your phone. Each time that you turn on your device or wake up the screen, you'll be asked to unlock your device.

1. From the Security & privacy screen, tap **Device unlock > Screen lock**.
2. Select one of the following options.
 - **None:** Disable any screen lock.
 - **Swipe:** Set swipe to unlock.

- **Pattern:** Set an unlock pattern. Follow the prompts to finish the settings.
- **PIN:** Set a PIN code as the screen unlock method.
- **Password:** Set a password as the screen unlock method.

Fingerprint

In addition to unlocking your phone, you can also use your fingerprint to authorize purchases and app access.

Add a fingerprint

1. From the Security & privacy screen, tap **Device unlock > Fingerprint**.
2. Enter your pattern, PIN, or password.
Note: To add a fingerprint, you must set your backup screen lock method first.
3. Tap **Next**. Put your finger on the sensor located on the **Power** key and lift after you feel a vibration. Keep pressing and lifting your finger to add the different parts of your fingerprint.
4. Tap **Done**.

Once you've registered your fingerprint, just tap the **Power** key with your finger to wake up and unlock your phone.

About phone

Access important phone information, view legal and safety information, etc.

From the Home screen, swipe up to access **Apps** and tap **Settings > About phone**.

Software update

Check for new software updates for your device.

From the Home screen, swipe up to access **Apps** and tap **Settings > System > System update**. Then tap **Check for update**.

Safety and use

We recommend that you read this chapter carefully before using your mobile device. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein. Use of connected devices subject to Boost Mobile's Terms and Conditions.

Traffic Safety

Always obey the local laws and regulations addressing the use of wireless mobile devices and their accessories in the areas where you drive. The use of mobile devices while driving may be prohibited or restricted in certain areas.

Conditions of Use

Operational Warnings: Only use your mobile device in accordance with local laws and regulations and obey all posted notices in public areas.

Do not attempt to disassemble your mobile device. If you disassemble your mobile device, the warranty will not apply.

Always handle your mobile device with care and keep it in a clean and dust-free place.

Do not allow your mobile device to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc.).

The manufacturer's recommended operation temperature range is 0°C (32°F) to 45°C (113°F).

Use only batteries and accessories which are recommended by Device manufacturer and its affiliates and are compatible with your mobile device model. Device manufacturer and its affiliates disclaim any liability for damage caused by the use of other batteries and accessories.

Please check local laws and regulations in your jurisdiction to learn how to best dispose of your mobile device.



PROTECT YOUR HEARING

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

Privacy

Please note that you are responsible for using the audio and visual recording features of your device in a manner that respects applicable laws. We disclaim any liability for your use of these or other features of your device to collect data from or about individuals.

Legal Information

In order to provide you with better access to certain important legal information, we've made the materials accessible from the phone's Settings menu. Review these materials prior to using your mobile device. To access the materials on your mobile device, swipe up from the home screen, and tap **Settings > About phone > Legal information**, and select a topic.

Regulatory Information (e-label)

Your mobile device uses an electronic label (e-label) that provides regulatory information about your device. To view the regulatory information for this device, on the device, swipe up from the home screen, then tap **Settings** > **About phone** > **Regulatory labels**.

Battery and Accessories

Observe the following precautions for battery use:

- Do not disassemble or open, crush, bend or deform, puncture, or shred.
- Only use the CTIA Certification certified adapters, products that bear the USB-IF logo or products that have completed the USB-IF compliance program.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion, or other hazards.
- Only use the battery with a charging system that has been qualified with the system per CTIA Certification Requirement for Battery System Compliance to IEEE1725. Use of an unqualified battery may present a risk of fire, explosion, leakage, or other hazards.
- Replace the battery only with another battery that has been qualified with the system per this standard: IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage, or other hazards. It is recommended that a qualified technician replace the battery. While you may choose any repair provider, please be aware that the manufacturer's warranty does not cover damage caused by improper installation or the use of non-qualified parts. For specialized service using manufacturer-approved tools, we recommend an authorized service provider.
- Improper battery use may result in fire, explosion, or other hazards.
- Do not replace an embedded battery pack. Improper replacement may present a risk of fire, explosion, leakage, or other hazards. Contact the manufacturer for replacement instructions.
- The phone identifies the battery by the Battery ID Pin.

Products that have the below symbol must be taken to collection points at the end of their life:



Municipal waste disposal centers with specific bins for these items of equipment.

Collection bins at points of sale.

You can learn more about how to recycle your mobile device by visiting the CTIA website at www.ctia.org/news/how-to-recycle-your-mobile-device.

CAUTION: IF BATTERY IS REPLACED BY AN INCORRECT TYPE, DEVICE MIGHT EXPLODE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTION.

 **Warning: Cancer and Reproductive Harm - www.P65Warnings.ca.gov.**

Regulatory agency identifications

FCC Regulations

This mobile phone complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information (SAR)

This mobile phone meets the government's requirements for exposure to radio waves. This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 1.36 W/kg, in hotspot mode is 1.33 W/kg, and when worn on the body, as described in this user guide, is 1.34 W/kg (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: XD6U651DS.

For body-worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.

Hearing Aid Compatibility (HAC)

This device is hearing aid-compatible as determined by ANSI C63.19-2019 and waiver DA-23-914. The lowest conversational gain is 7.54 dB with a hearing-aid, and 11.37 dB without hearing-aid, using telecoil coupling capability and Bluetooth connectivity.

The 2019 ANSI C63.19 standard does not use this rating system nor do any test standards exist for any wireless technologies that transmit above 6 GHz. Therefore, 5G NR mmWave frequency bands cannot be tested. Instead, this standard uses the conversational gains for the device's hearing aid compatible capabilities.

This device has been tested and certified for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids.

It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or retailer.

Licenses



The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Device Manufacturer and its affiliates is under license. Other trademarks and trade names are those of their respective owners.



The Wi-Fi Logo is a certification mark of the Wi-Fi Alliance.



The N-Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.

CELERO5G VELOCITY LIMITED WARRANTY

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE IN THE UNITED STATES.

What This Warranty Covers: Boost SubscriberCo L.L.C. (“**Boost Mobile**,” “**we**,” or “**us**”) warrants that a new Boost Mobile-branded Celero5G Velocity device (“**Product**”) purchased from Boost Mobile or Boost Mobile’s authorized resellers and distributors in the United States will be free from defects in materials and workmanship (collectively referred to as “**Manufacturing Defects**”) under normal consumer use in accordance with the documentation and/or user manuals provided or made available with the Product. For the purposes of this Limited Warranty, a “new” Product means a device that has not been refurbished, renewed, pre-owned, or used.

A “**Manufacturing Defect**” means one or more of the following:

- **Electrical and Mechanical Issues:** Any verifiable fault with the Product’s internal electronic or mechanical parts (not caused by external damage).
- **Power and Battery Problems:** The Product fails to power on or has critical battery malfunctions that makes it unable to hold a charge (not due to normal battery aging, abuse, or misuse).
- **Display and Screen Issues:** Verifiable Product hardware faults such as dead pixels, permanent lines, or discoloration. This also includes Product touchscreens that are unresponsive or suffer from erratic touch input (not caused by pressure, impact, or cracked glass).
- **Integrated Audio Components:** Inoperable or distorted internal earpiece speakers, loudspeakers, or microphones within the Product (not caused by liquid ingress or debris in the ports).
- **Camera Hardware Failure:** Verifiable failure of the Product’s integrated camera modules, such as hardware-level inability to focus, permanent internal spots on the image sensor, or a total failure of the camera hardware to communicate with the Product (not caused by external scratches, cracked lenses, or third-party software).
- **Charging Port and Haptics:** The Product’s integrated charging port fails to establish a secure electrical connection, or the Product’s internal haptic motor fails to provide vibration alerts (not caused by debris, bent pins, or physical strain).
- **SIM Card Detection Issue:** The Product consistently cannot detect or read a valid Boost Mobile SIM card.
- **System Issue:** The Product frequently freezes, crashes, or restarts unexpectedly due to a hardware fault, preventing normal use.
- **Button Problems:** The Product’s integrated hardware buttons (e.g., power, volume, home button) are inoperable or unresponsive.
- **Connection Problems:** The Product is unable to connect to a cellular network (‘no service’) or the internet due to a Product hardware issue (not due to network outage, account settings, or poor coverage).
- **Other Manufacturing Issues:** Any other verifiable issue that materially affects the Product’s core functions (e.g. making calls, audio input/output, capturing media, charging, haptic alerts, connecting to the internet, or running applications) to an extent consistent in nature and severity with the foregoing list.

BOOST MOBILE DOES NOT WARRANT THAT THE OPERATION OF THE PRODUCT WILL BE ERROR-FREE OR UNINTERRUPTED.

How Long Does This Warranty Last: The warranty period for the Product is twelve (12) months beginning on the date of original retail purchase of the Product by the end-user purchaser (as recorded on the proof of purchase receipt).

What This Warranty Does Not Cover: This Limited Warranty only applies if you use your Product under normal consumer use in accordance with the documentation and/or user manuals provided or made available with the Product. It does not cover the following:

- Defects, damage, or malfunction resulting from noncompliance with the Product's documentation and/or user manuals.
- Defects, damage, or malfunction occurring after purchase of the Product, such as:
 - cracked, shattered, or scratched screen or camera lens;
 - damage from drops, like dents, bent frames, or scuffs;
 - damage to charging ports, headphone jacks, or other ports;
 - damage from exposure to liquid, moisture or dampness (including contact with water, rain, or perspiration), or from extreme thermal or environmental conditions (including extreme heat, cold, or salt air);
 - damage caused by repair services by parties other than Boost Mobile or its authorized service centers; and
 - any other damage from accidents, abuse, misuse, abnormal use, abnormal conditions, neglect, exposure to sand or dirt, unusual physical, electrical, or electromechanical stress, corrosion, oxidation, or other external causes, including any spillage of food or chemicals, or contact with any other substances likely to alter the Product.
- Scratches, dents, or other cosmetic damage, unless such damage has occurred due to a Manufacturing Defect.
- Ordinary wear and tear, including but not limited to the diminishment of consumable parts (such as batteries or protective coatings) designed to diminish over time, or the natural degradation of camera lenses and screens, unless such damage has occurred due to a Manufacturing Defect.
- Defects, damage, or malfunction caused by the use of the Product in conjunction or connection with accessories, products, or ancillary/peripheral equipment not furnished by Boost Mobile, where the damage is directly attributable to such third-party equipment.
- Defects, damage, or malfunction resulting from improper use, testing, operation, maintenance, installation, service, modification, or adjustment of the Product that is not performed by Boost Mobile or its authorized service centers, including but not limited to instability or damage caused by the installation of software or unauthorized root access.
- Defects, damage, or malfunction resulting from viruses, malware, or other software problems introduced into the Product after purchase.
- Defects, damage, or malfunction caused by services or applications downloaded or otherwise installed on the Product after purchase that have not been developed, recommended, or pre-installed by Boost Mobile; the functioning of those services or

applications, and any damage resulting therefrom, is the exclusive responsibility of their designers and/or developers.

- Shipping damage if you fail to pack and ship defective Product in the manner prescribed by Boost Mobile.
- Products that have been altered in a way that prevents us from determining if this Limited Warranty applies, including: (a) removed, altered, or obliterated International Mobile Equipment Identity ("IMEI"), date tags, or other manufacturer coding; (b) mismatched or duplicated IMEI; or (c) broken seals or other evidence of tampering that prevents us from verifying the original hardware configuration or the authenticity of the Product's internal components, including modification, alteration, or illegibility of the IMEI or EAN (European Article Number) of the Product, except in connection to a Product repair as required or permitted by applicable law.

What Boost Mobile Will Do: If a defect covered by this Limited Warranty occurs with your Product during the warranty period, and you submit a claim and return the Product as we instruct, we will, subject to your Product being eligible for warranty, replace your defective Product at no charge with a new or renewed product that is the same model as or a functional equivalent to the Product being replaced. The color of the replacement product is not guaranteed. The replacement product is covered under this Limited Warranty for the remainder of the original warranty period of the replaced Product, or for ninety (90) days beginning on the date the replacement product is shipped to you, whichever is longer. For clarity, a replacement product does not receive a new twelve (12) month warranty period.

When we receive your returned Product, we will check its eligibility for warranty coverage. If it is covered, we will send a replacement product to the address you provided for warranty service. If it is not covered, we will return your Product to you.

How to Make a Warranty Claim: To start a warranty claim, you must contact Boost Mobile at 1-833-502-6678 and follow the provided instructions. To obtain warranty service, you may need to provide your contact information (name, phone number, email address, and physical address), your Product IMEI, and a proof of purchase. You may also need to answer diagnostic questions and follow other Boost Mobile procedures, including instructions to download, install, and accept software updates.

You are responsible for any applicable carrier service fees incurred while obtaining such software updates. If the software updates do not fix the defect and we determine your Product may be eligible for warranty service, we will send you prepaid waybills (shipping information) and provide packaging instructions to ship your Product to us. Once you ship your Product, you cannot cancel your warranty claim.

Before Shipping Your Product: Back up your data, remove all personal information, disable all security features (including passwords), and reset the Product to factory settings. Instructions on how to perform these steps and other troubleshooting tips can be found at <https://help.boostmobile.com/docs/troubleshooting-hub>. WE ARE NOT RESPONSIBLE FOR LOST DATA, SETTINGS, INFORMATION, SOFTWARE, OR APPLICATIONS THAT YOU MAY HAVE STORED, PRESERVED, OR LOADED ON THE PRODUCT. WE ARE ALSO NOT RESPONSIBLE FOR THE REIMBURSEMENT OF ANY SUBSCRIPTION FEES, DIGITAL CURRENCY, IN-GAME ASSETS, OR EXTERNAL SERVICE COSTS INCURRED WHILE YOUR PRODUCT IS BEING SERVICED OR REPLACED. Keep your SIM card and all accessories (charger, phone case, memory card, etc.) as we cannot return them after the Product is shipped to us. When we replace your defective Product, the replacement product becomes your property, and the replaced Product becomes

Boost Mobile's property.

Important Information:

- Replacement Address: We only ship replacement products within the United States.
- Warranty Claim Updates: Contact us at 1-833-502-6678 for warranty claim updates.
- Insurance Claim: If you have Boost Protect or Boost Protect with AppleCare Services on your Product and your Product is lost or stolen, you can file a claim at <https://protect.likewise.com>.

Limits on Boost Mobile's Responsibility: THIS LIMITED WARRANTY SETS OUT THE FULL EXTENT OF BOOST MOBILE'S RESPONSIBILITIES AND THE EXCLUSIVE REMEDY REGARDING PRODUCTS.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, BOOST MOBILE LIMITS THE DURATION OF ALL OTHER WARRANTIES AND REMEDIES, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS, OR IMPLIED REGARDING YOUR PRODUCT, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE TO THE DURATION OF THIS LIMITED WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, BOOST MOBILE IS NOT RESPONSIBLE FOR ANY DIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR OTHER INDIRECT DAMAGES ARISING OUT OF, RELATING TO, OR INCURRED IN CONNECTION WITH ANY PRODUCT, WHETHER FOR BREACH OF WARRANTY OR BROUGHT UNDER ANY OTHER LEGAL THEORY. THIS LIMITATION ALSO APPLIES TO ANY CLAIMS YOU MAY BRING AGAINST ANY OTHER PARTY TO THE EXTENT THAT BOOST MOBILE OR ANY OF ITS AFFILIATES WOULD BE REQUIRED TO INDEMNIFY THAT PARTY FOR SUCH CLAIM. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

UNDER NO CIRCUMSTANCES WILL BOOST MOBILE'S LIABILITY, IF ANY, EXCEED THE PURCHASE PRICE PAID FOR ANY PRODUCT.

General: No Boost Mobile reseller, distributor, service center, agent, employee, or any third party is authorized to make any modification, extension, or addition to this Limited Warranty. If any term of this Limited Warranty is held to be illegal or unenforceable, the remaining terms will remain in full force and effect. For the governing law and dispute resolution provisions applicable to you and Boost Mobile, please refer to the Dispute Resolution section of the Boost Mobile Terms and Conditions available at <https://help.boostmobile.com/docs/general-terms-conditions>. As described in the terms, you are not required to participate in an initial informal dispute resolution process with Boost Mobile to resolve a dispute regarding your warranty claim. If you choose to do so, you must send your dispute resolution notice to: Boost SubscriberCo L.L.C., Attn: Dispute Resolution, P.O. Box 9040, Littleton, Colorado 80120-9040. Boost Mobile (or its successor in title) is the warrantor under this Limited Warranty.