

CELERO[®] 5G TAB



User Guide

Contents

 
Getting started	4
Getting to know your tablet	4
Setup	6
Install a Nano SIM/microSD card	6
Charge the battery	7
Turn your tablet on and off	8
Complete the setup screens	8
Home screen	9
Status bar	10
Notification and Quick Settings panel	11
Making connections	12
Contacts	12
Add a contact	12
Edit a contact	12
Delete a contact	12
Share a contact	12
Contacts settings	12
Messages	13
Pair your mobile phone	13
Unpair your mobile phone	13
Send a text message (SMS)	14
Send a multimedia message (MMS)	14
Finding image and video attachments	14
Messages settings	14
Gmail™	14
Receive an email	14
Compose an email	15
Email settings	15
Internet and social networking	15
Chrome browser	15
Facebook	15
YouTube	16
Connectivity	16
USB	16
Wi-Fi	16
Bluetooth	17
Apps and entertainment	18
BoostMax Audio	18
Entertainment Space	19
Kids Space	20

Camera and video	22
Take a photo.	24
Record a video.	24
Camera settings	24
Photos	25
Productivity	26
Calendar	26
Google Maps	26
Clock	27
Useful settings	29
Languages	29
Date & time	29
Display	30
Wallpaper & style	32
Sound	32
Digital Wellbeing & parental controls	32
Security & privacy	33
About tablet	34
Safety and use	35
Regulatory agency identifications	38
FCC Regulations	38
RF Exposure Information (SAR)	38
Warranty	40

Getting started

The topics in this section will introduce you to your tablet, help you get set up with service, provide an overview of the tablet screen, and get you started with basic tablet operations.

Getting to know your tablet

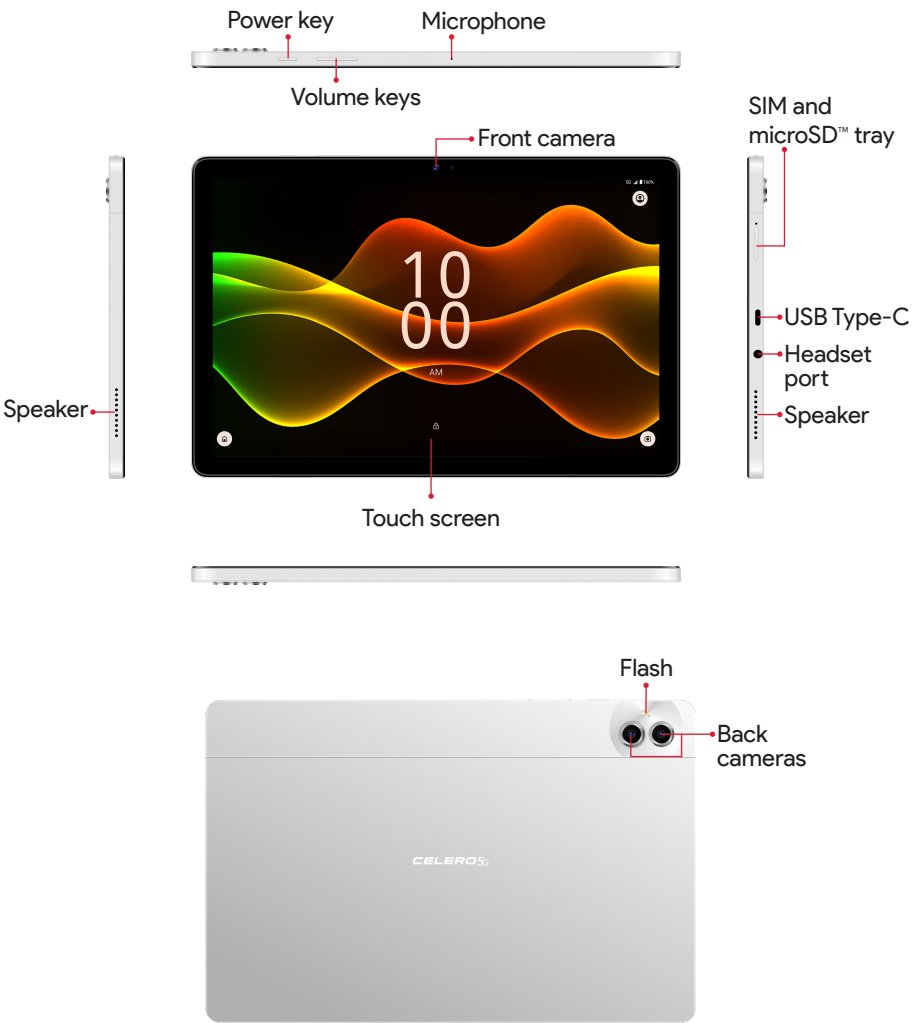

Note: Your tablet's screens and app layouts are subject to change. This user guide uses sample images only.


Part	Description
Power key	<ul style="list-style-type: none"> • Turn tablet on: Press and hold the Power key. • Turn tablet off: Press the Power key and Volume up key at the same time. • Turn screen on/off: Press the Power key. • Capture screenshot: Press the Power key and Volume down key at the same time.
Volume keys	Adjust the volume for media, notifications, and system sounds.
Microphone	Transmit your voice electronically for voice recording or Google Assistant.
Front camera	Take pictures and record videos while facing the screen.
SIM and microSD™ tray	Insert your Nano SIM card and microSD card (sold separately) for service and additional storage.
USB Type-C	Connect the USB cable (included) for charging or to connect other accessories.
Headset port	Plug in a headset (sold separately) to listen to music.
Speaker	Listen to music and automated prompts.
Touch screen	<ul style="list-style-type: none"> • View information needed to operate your tablet. • Access your tablet's features and applications.
Back cameras	<ul style="list-style-type: none"> • Take pictures and record videos. • Use features such as the beauty mode, slow motion, time lapse, motion photo, and more.
Flash	<ul style="list-style-type: none"> • Brighten photos taken indoors or at night. • Use as a flashlight to see in dark areas.

CAUTION! Inserting an accessory into the incorrect port may damage the tablet.


Setup

Install a Nano SIM/microSD card

 1. Insert the included SIM pin to eject the SIM tray.

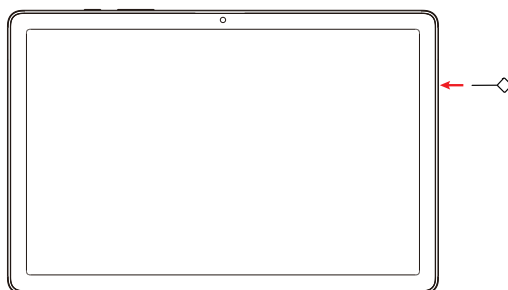

 
2. Place or remove the Nano SIM card and microSD™ card with the metal contacts facing down into the tray. Gently slide the SIM tray back into the slot.

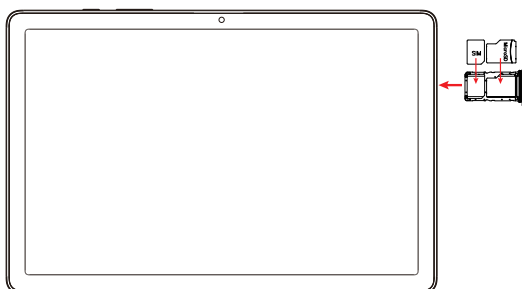

Note: microSD™ cards are sold separately. The Celero5G Tab accepts cards up to 1 TB in capacity.

Charge the battery

 1. Connect one end of the data cable to the USB port located on the right side of your tablet.

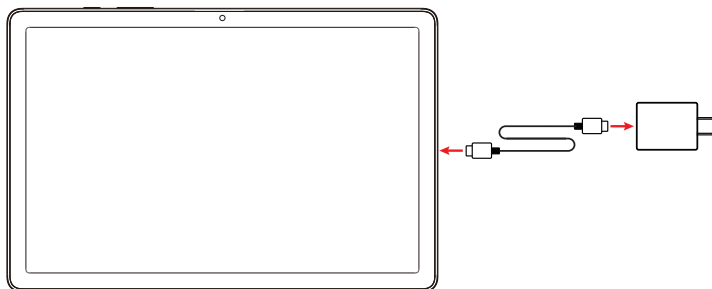




2. Connect the other end to the power adapter.
3. Connect the power adapter to an electrical outlet to fully charge your tablet.

Note: Use the power adapter that comes with your tablet; using other adapters may damage your tablet.

Optimize your battery life

To optimize your battery life, you can make the following adjustments:


- **Turn on power saving mode:** Go to **Settings > Battery > Battery Saver**, and slide the Use Battery Saver switch to the **On**  position.
- **Lower screen brightness:** Go to **Settings > Display > Brightness level**, and slide the brightness bar to the left.
- **Screen timeout:** Go to **Settings > Display > Screen timeout**, and select proper timeout duration.
- **Optimized charging:** Go to **Settings > Battery > Optimized charging > On**  to let your tablet only charge up to 80% battery to help extend battery lifespan.
- **Overcharge protection:** Go to **Settings > Battery > Overcharge protection > On**  to limit charge to 80% after 24 hours of continuous charging.

Turn your tablet on and off

The instructions below explain how to turn your tablet on and off.

Press and hold the **Power** key until the device turns on.

To turn your tablet off, choose one of the following ways:

- Press the **Power** key and the **Volume up** key at the same time, and tap **Power off**.
- Swipe down on the Status bar to enter Notification and Quick Settings panel, and tap **Power icon**  > **Power off**.



 
Power icon

Complete the setup screens

Once your tablet is powered on, you will need to run Setup. The Setup Wizard will appear to guide you through the basic settings on your device.

Follow the instructions to finish your tablet setup.

If you choose **A child** on **Who's going to use this device** screen, you will be guided to create or sign in both child and parent Google Accounts, set up Family Link and configure Google Kids Space for your child.

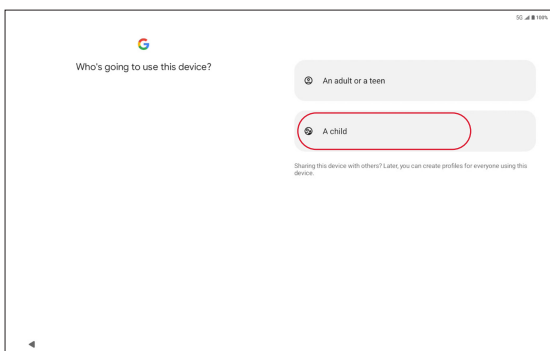


For more information on Google Kids Space app, pls go to ["Kids Space" on page 20.](#)

Home screen

The Home screen is the starting point for your tablet’s applications, functions, and menus. You can customize your Home screen by adding application icons, shortcuts, folders, and more.

 Your Home screen extends beyond the initial screen. To add a new Home screen, drag an app icon to the right edge of the main screen and release the icon.

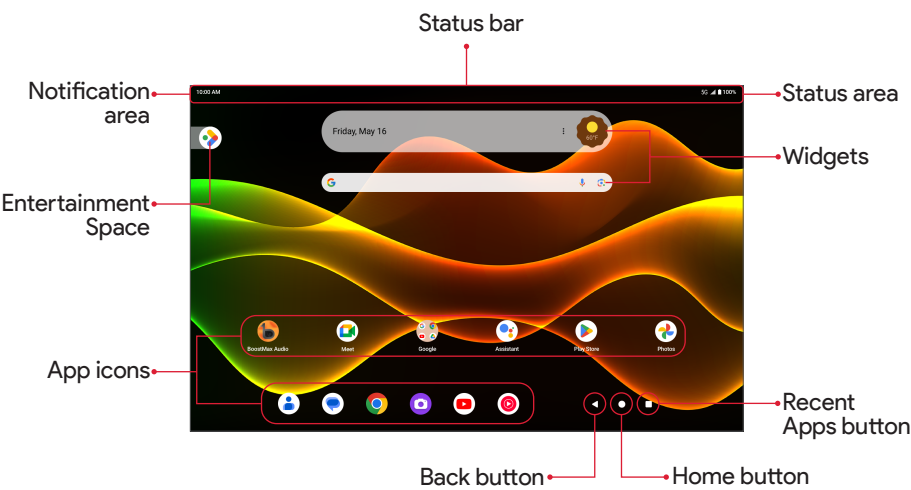
















Item	Description
Status bar	Icons indicate your tablet’s status (on the right side) and notifications (on the left side).
Notification area	View notifications for incoming messages, application updates, and more. Drag the Status bar down to display the Notification panel.
Status area	View tablet and service status information such as signal strength, battery status, Wi-Fi and data connectivity, etc.
Widgets	Add customizable quick access to app functions on your tablet’s Home screen.
App icons	Add shortcuts to your favorite apps to the Home screen.
Entertainment Space	Swipe right on the screen to access Entertainment Space, a one-stop, personalized home for all your favorite movies, shows, videos, games and books.

Item	Description
Back button	Tap to return to the previous screen.
Home button	Tap to display the main Home screen.
Recent Apps button	<ul style="list-style-type: none"> • Tap to display a list of recently used apps. • Double-tap to swap between your last two used apps.

Status bar


The Status bar at the top of the Home screen provides tablet and service status information on the right side and notification alerts on the left.

Status icons (Right side)			
3G	3G data service		Network (full signal)
4G LTE	4G LTE data service		Wi-Fi® enabled
5G	5G data service		Hotspot on
	Battery (full charge)		GPS in use
	Battery (charging)		Airplane mode enabled
	Mute on		Bluetooth® connected
Notification icons (Left side)			
	Download		Warning
	New text or MMS message		New Email
	Update successful		Wi-Fi network available

Note: Not all status and notifications icons are listed on the table above.

Notification and Quick Settings panel

 - 1. Swipe down on the Status bar to open the Notification and Quick Settings panel.
- 2. Tap a notifications on the right side of the panel to view the notification details.
Tap a settings on the left size of the panel to turn the settings on or off.
- 3. Swipe left or right on a notification to delete it, or tap **Clear all** to clear all event-based notifications (other ongoing notifications will remain).
- 4. You can tap **Settings** ⚙️ to access full settings, tap **Power off** ⏻ to turn your tablet off, or tap 👤 to switch users.
- 5. To close the panel, swipe up or tap the **Back** button ◀️.

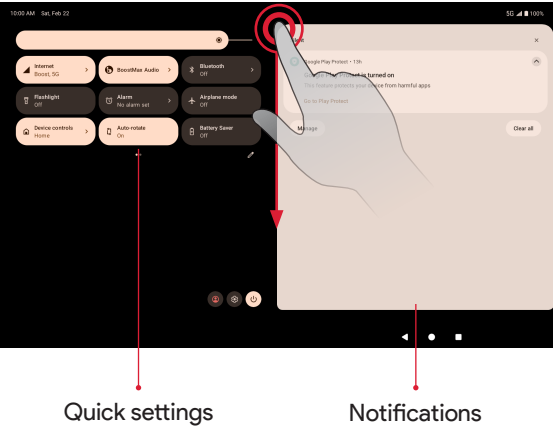


Making connections


The topics in this section will explain how to help you make connections, from maintaining contacts, to text messages, email, Internet, and international services.

Contacts

 
From the Home screen, swipe up to access Apps and tap **Contacts** .

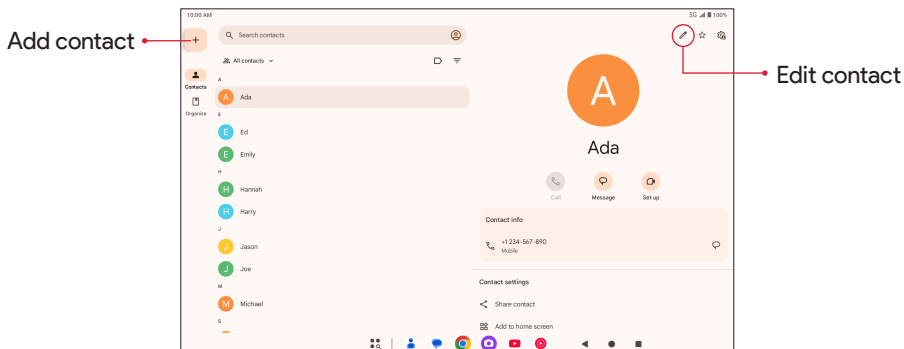

Add a contact

1. From the **Contacts** screen, tap  to add a contact.
2. Use the keyboard to enter information. When you are finished, tap **Save**.

Edit a contact

1. From the **Contacts** screen, tap a contact to view its details.
2. Tap **Edit**  on the top right corner of the screen.

Delete a contact


1. From the **Contacts** screen, tap a contact to view its details.
2. Scroll down on the contact details screen, and select **Delete**.

Share a contact

You can quickly share contacts using Bluetooth, Gmail, Google messages, etc.


1. From the **Contacts** screen, tap a contact to view its details.
2. Scroll down on the contact details screen, and select **Share contact**.
3. Select how you'd like to share the contact information card (vCard).

 
Contacts settings

On top right corner of the **Contacts** screen, tap  or Google Account avatar when signed in > **Contacts settings** to adjust your contacts settings.

Messages

Send text and multimedia messages by pairing your mobile phone.


From the Home screen, tap **Messages** .

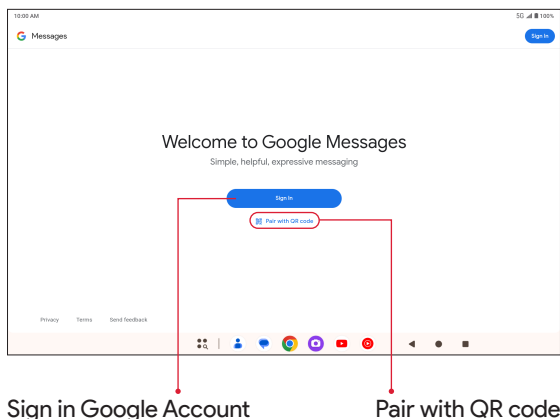


Pair your mobile phone

You can pair your mobile phone by following two ways:


Pair with QR code


1. On your tablet, tap **Pair with QR code**. Your QR code appears.
2. On your phone, open the **Google Messages** app, tap  on the top right corner of the screen and select **Device pairing** > **QR code scanner** to open the scanner. Scan the QR code on your tablet.
3. Your tablet will automatically pair with your phone.

Sign in your Google Account:



1. On your tablet, tap **Sign in** to sign in to your Google Account. An emoji shows up.
2. On your phone, open the **Google Messages** app, tap  on the top right corner of the screen and select **Sign in** to sign in with the same Google Account. Tap the matching emoji that shows up on your tablet.
3. Your tablet will automatically pair with your phone.

Unpair your mobile phone

To unpair your mobile phone, tap  on the top left corner of the tablet messages screen and select **Unpair**.








You can also tap  on the top right corner of the phone messages screen and select **Device pairing** > tap **X** at the right side of the paired device.

Send a text message (SMS)

1. From the Messages screen, tap .
2. Select a conversation and compose your message.
3. When done, tap **Send**  to send the text message.

Note: Your text message automatically becomes a multimedia message if you enter an email address as the recipient, attach an item, or compose a long message (over 160 characters).

Send a multimedia message (MMS)

1. From the Messages screen, tap .
2. Select a conversation and compose your message.
3. You can tap  to insert an emoji, tap  to send a sticker, tap  to send a GIF file, and tap  to attach a file (image, audio, video, etc.).
4. After adding attachments, you can tap to view it, and tap  to delete the attachment.
5. Tap **Send**  to send the MMS message.


Finding image and video attachments

Images and video attachments in MMS messages are typically stored in the Pictures folder, often in a file within Pictures called Messages or Downloads.


You can also find images and video in your tablet's Gallery or Photos app.

To ensure the image or video attachment is saved to your device, you might need to long-press the attachment in the message and select either the "Save" or "Download" option.

Messages settings

Tap  on the top of the Messages screen and tap **Settings** to adjust your messages settings.

Gmail™



Use Gmail to send, receive, and manage your email messages. Before using Gmail, you must sign into your Google Account on your tablet. From the Home screen, swipe up to access **Apps** and tap **Gmail** .

Note: You can use the Gmail app to manage email for other accounts, such as Hotmail, Outlook, Exchange, and more.

Receive an email


When a new email is received, you will see  in the Status bar. Drag the Status bar down to display the Notification panel and tap the new message to view it.

Compose an email

1. From the Gmail screen, tap  to compose a new email message.
2. Enter the message recipient(s), subject, and message, and then tap **Send** .

Email settings

You can access settings for the Gmail app and for your individual email accounts from the Gmail settings menu.

1. From the Gmail screen, tap  > **Settings**.
2. Tap **General settings** to access settings for all accounts, or tap an account name to configure settings for a specific email account.

Internet and social networking

The following topics describe how to connect to and use the Internet on your tablet and how to access popular social networking sites.


Chrome browser

From the Home screen, tap **Chrome**  to browse the Internet, search for information, and bookmark your favorite web pages for convenient access.


Browsing web pages

1. Tap the address field.
2. Enter a web address or a keyword to browse for web pages.


Adding a bookmark

1. Open the web page you want to bookmark.
2. Tap  on the top right corner of the screen.

Opening a bookmark

1. From the Chrome browser screen, tap  > **Bookmarks**.
2. Select the bookmark of the website you want to view.


Customizing browser settings

1. From the Chrome browser screen, tap  > **Settings**.
2. In the Settings list, you can select options to customize the browser.

Tip: For more information, visit: google.com/chrome.

Facebook

Post updates, see what your friends are up to, upload pictures and check-ins, and more with on-the-go Facebook access.

1. From the Home screen, swipe up to access **Apps** and tap **Facebook** .

2. Enter your mobile number or email and password and tap **Log In**, or tap **Create new account** to join Facebook.


3. Once completed, your Facebook account will be added to your tablet.

Once you've either created an account or signed in, you can post and view updates, upload pictures, tag locations, and more, all from your tablet.

From the **Facebook** screen, tap **What's on your mind?** to type an update. You can also share photos and videos, start a live video, scroll through your Facebook feed, and more.

YouTube

View videos uploaded to YouTube and upload your own videos.

1. From the Home screen, swipe up to access **Apps** and tap **YouTube** .

2. Browse YouTube channels and tap a video to view.

3. The video will play on your tablet screen. Tap the screen to pause or resume play while watching.

You can post videos to your YouTube account from your tablet.

1. Tap **Record/Post Video** .

2. Select a video to upload, record a new video to upload, or stream a live video. Enter a title, description, and tags, and select a privacy setting.

Connectivity

The following topics address your tablet's connectivity options, including USB file transfer, Wi-Fi, Bluetooth, and more.

USB

You can use the USB cable to connect your tablet directly to your computer and transfer music, photos, and other content files.

1. Connect your tablet to your computer using the USB cable.

2. Swipe the Status bar down to display the Notification panel and tap **Charging this device via USB**.

3. Tap **File Transfer**. You can also select other options available.


4. On your computer, navigate to the detected device and open it.

5. If available, select a drive (**Internal shared storage** or **SD card**).



6. Select a folder and copy files from your computer to your tablet or from your tablet to your computer. When done, disconnect your tablet from your computer.

Wi-Fi



To use your tablet's Wi-Fi, you need access to a wireless access point or hotspot.

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .

2. Tap **Network & internet** > **Internet**.

3. Slide the Wi-Fi switch to the **On**  position to enable Wi-Fi.
4. Tap a Wi-Fi network to connect, enter the password (if applicable), and then tap **Connect**.
5. Your tablet will be connected to the Wi-Fi network. You will see  in the status bar.


Bluetooth

1. From the Home screen, swipe up to access **Apps** and tap **Settings** .
2. Tap **Connected devices** > **Connection preferences** > **Bluetooth**.
3. Slide the Bluetooth switch to the **On**  position.

Pair Bluetooth devices

1. From the Connected devices screen, tap **Pair new device**.
2. Tap a device under Available devices and follow the on-screen instructions to pair with the device.
3. You can now tap a paired device to connect.

To forget a paired device

1. From the Connected devices screen, tap **Settings**  next to the device you wish to forget.
2. Tap **Forget** > **Forget device**.
3. The device will be unpaired from your tablet.

Share files via Bluetooth

You can use Bluetooth to transfer files between your tablet and another Bluetooth-enabled device, such as a phone or computer. Send photos, videos, calendar events, contacts, and more.



Apps and entertainment

The topics in this section will explore the features that make your tablet so much more than a tablet, from the BoostMax Audio™ to camera, photos, and more.

BoostMax Audio

 
With BoostMax Audio, every beat, note, and sound will come alive with unparalleled richness, depth, and clarity. Whether you're an avid music lover, a dedicated gamer, or a movie enthusiast, our cutting-edge technology will transport you into a world of immersive sound like never before.

To access BoostMax Audio, you can choose one of the following ways:

- From the Home screen, tap **BoostMax Audio** .
- From the Home screen, swipe up to access Apps and tap **BoostMax Audio** .
- From the Home screen, swipe up to access Apps and tap **Settings > Sound & vibration > BoostMax Audio**.

After tablet's initial setup, a BoostMax Audio popup window will appear on top of the Home screen, you can tap **TRY IT NOW** to access BoostMax Audio application.

To quickly turn on or turn off the BoostMax Audio, swipe down on the status bar twice to access Quick Settings Panel, then tap **BoostMax Audio**.

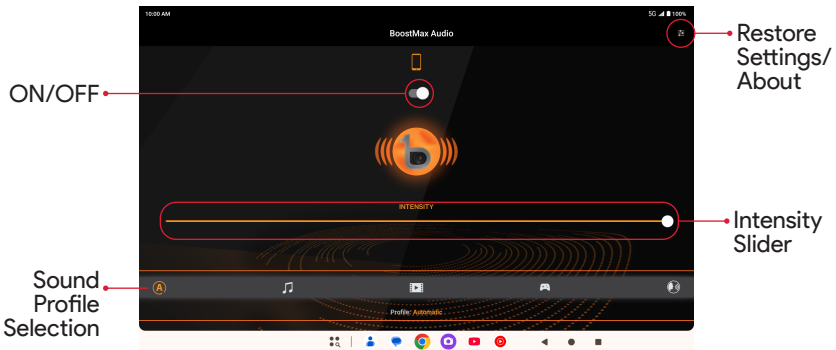

Entertainment Space

Entertainment Space is a one-stop, personalized home for all your favorite movies, shows, videos, games, music, podcasts and books. Once you sign in to your subscription apps, Entertainment Space will show your content in one place. And if you want to share your tablet, everyone in the family can have their own personalized profile.

In the **Watch** tab, move between streaming services, find movies or shows to watch, rent or buy from Google TV and view recommended videos from YouTube. The Continue Watching row lets you easily resume the show you were watching last night. If you're in the mood for something new, Entertainment Space will provide personalized and trending recommendation rows from Google TV, Twitch, Hulu and many additional services.





With the **Games** tab, find fun and adventure with Google Play Games. The Continue Playing row lets you continue games where you left off and select games are available for Instant play, so you can try a game before downloading it.

The **Read** tab showcases a wide selection from Google Play Books. You can find audiobooks in this section, too. Enjoy free sneak peeks before buying, books with discounted prices and recommendations based on your tastes or current trends.

Think of the **Listen** tab as your record shelf or CD stand on the go. You can find music and podcasts here, selected based on your listening preferences. There are also mix tracks based on past listening, like radio stations created just for you.


In each section, you'll find options for adding content providers by scrolling to the bottom of the tab.

Note: Content provider apps delivered from the Boost Mobile App Cloud service will not appear in Entertainment Space unless the app is updated from the Google Play Store.

Tab	Description
 Watch	All video content, including streaming services, Google TV and YouTube.
 Watch	Games from Google Play Games, including games for Instant play to try before downloading.
 Read	Books and audiobooks for your reading and listening pleasure.
 Listen	Music and podcasts selected based on your tastes and current trends.

Kids Space

A kids mode with high-quality, age-appropriate content to empower kids to safely learn, grow and play online.

From the Home screen, swipe up to access **Apps** and tap **Kids Space** .

If you have already finished set up Kids Space, you can go straight to Kids Space and enjoy a library of high-quality content.

Set up Kids Space

 
If you have not completed the set up, follow below steps to get started:

1. Tap **Get started** button.
2. Sign in to your child's existing Google Account or follow the prompts to create a new Google Account for your child.
3. Sign in with your own Google Account.
4. Edit your child's Google Kids Space settings. and manage your apps on this device.
5. Work with your child to choose their interests and create a character.
6. When finished, tap **Done**.



Use Google Kids Space

When a child opens Kids Space, they can see recommendations for apps, games, books, and videos to find new ways to play and learn.

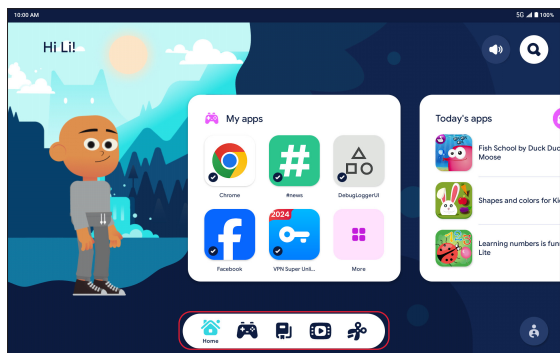

Icon	Name	Description
	Home	In the Home tab, your child can access Google Kids Space activities and suggestions for exploration
	Play	In the Play tab, your child can find games recommended by Google Kids Space.
	Read	In the Read tab, your child can find free books selected especially for your kids.
	Watch	In the Watch tab, your child can find recommended videos from YouTube Kids.
	Make	In the Make tab, your child can access recommended videos about offline activities sourced from YouTube Kids.

Kids Space settings

From Kids Space screen, press and hold to access settings.








You can manage parental controls, free up space, adjust device settings, add more apps, exit Kids Space, etc.



Camera and video

You can use the camera or video camera to take and share photos and videos.



On-screen icons

Icons		Function/Service
	Settings	Select camera modes and settings options.
	Flash	Activate or deactivate the camera flash.
	Picture size ratio	Set the photo quality and aspect ratio.
	Photo filters	Choose from a variety of photo color filters.
	AI Powered Enhance	Automatically detect various scenes and adapt the proper settings or parameters like brightness and contrast, color saturation, noise reduction, etc.
	Gallery	View the last photo or video taken.
	Google Lens	Use Google Lens to find or search what you see in your camera.




Icons		Function/Service
	Capture	Capture a photo.
	Switch cameras	Switch between the front and back cameras.

Useful modes






Modes	Function/Service
Professional	Manually adjust settings such as shutter speed, ISO, white balance, focus, etc. for professional quality photos.
Video	Record videos and access video settings.
Photo	Capture photos and access camera settings.
Portrait	Blur the background around the subject for a professional look.
Beauty	Smooth imperfections and brighten facial features for flawless photos.
More	<ul style="list-style-type: none"> • Time lapse: Record videos over a long period of time than speed it up for a fast action moment. • Slow motion: Record videos in slow motion. • Motion photo: With motion photos, you can get the flexibility of a recording with the same image quality you expect.

Note: Camera options vary based on mode, camera in use, etc.

Take a photo



1. From the Home screen, tap **Camera** . You can also access the Camera with one of the following methods:
 - From the Home screen, swipe up to access **Apps** and tap **Camera** .
 - Press the **Power** key twice quickly.
 - From the Lock screen, swipe up from the bottom right corner of the screen.
2. Tap **Photo** to switch to Photo mode.
3. Aim the camera at your subject and tap  or press the **Volume** key to take the photo.

Record a video


1. From the Camera screen, tap **Video** to switch to Video mode.
2. Aim the camera at your subject and tap  or press the **Volume** key to start recording a video.
3. Tap  to hold the recording and tap  to resume. Tap  to stop recording and save your video. To take a picture during the recording, tap .

 
Camera settings

You can adjust your camera's settings using the icons on the main camera screen and the full camera settings menu.



1. From the Home screen, tap **Camera** .
2. Tap **Settings** .

Photos

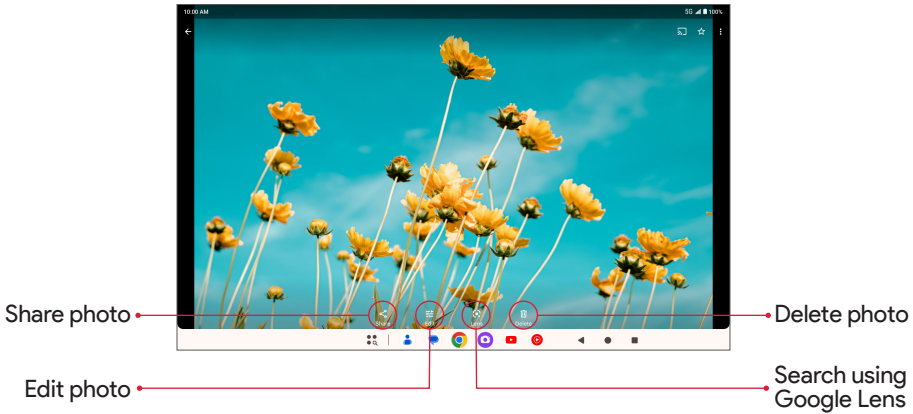Using the **Photos**  app, you can view photos and watch videos that you've taken, downloaded, or copied onto your storage card or tablet memory. For pictures that are on your storage card or tablet memory, you can do basic editing such as rotating and cropping.



Edit photos


1. From the Home screen, swipe up to access **Apps** and tap **Photos** .
2. Tap the picture you want to edit.
3. Tap  to access the Edit screen.
4. When finished, tap **Save copy** to save a copy of your photo.

Productivity


Use your tablet to stay productive and organized with calendar, navigation, alarm, office, and more productivity apps.

Calendar


Use the Calendar to create and manage events, meetings, and appointments.

From the Home screen, swipe up to access **Apps** and tap **Calendar** . You can view calendar in Schedule, Day, 3 days, Week, or Month view.


Add an event

1. From the Calendar screen, tap **Add**  to add an event.
2. Enter event details, and then tap **Save**.


Edit an event

1. From the Calendar screen, tap a date and an event to view the details.
2. Tap **Edit**  to edit the event and tap **Save** to save.

Delete an event

1. From the Calendar screen, tap a date and an event to view the details.
2. Tap **Options**  > **Delete** to delete the event.

Calendar settings


1. From the Calendar screen, tap  > **Settings** > **General**.
2. Tap an option to adjust Calendar settings.

Google Maps



Explore and navigate your world with Google Maps. Find places you'll love, connect with businesses you're interested in, and get around with real-time traffic information.



Search for destinations

Use Google Maps to locate and map a specific address or destination.

1. From the Home screen, swipe up to access **Apps** and tap **Maps** .
2. Tap **Search here**.
3. Enter an address, city, facility name, etc., then choose a search result. You will see your location on the map.


Google Maps operations

- **View current location:** Tap  to find your current location on the map.
- **Explore nearby venue categories:** Tap **Explore**  to browse nearby venues by selecting a category such as restaurants, parks, hotels, and more.



- **Select map types for different views:** Tap **Map Type**  and choose your map view, or select to view map details such as traffic, street view, etc.
- **Find a route to your destination:** Tap **GO** , enter your desired start location and destination, and tap a method of transportation (car, public transit, or on foot) for a list of step-by-step directions to your destination.

Clock

The Clock app allows you to set alarms, view different world times, use a stopwatch, set a timer, manage your bedtime, and use your tablet as a desk clock.

From the Home screen, swipe up to access **Apps** and tap **Clock** .



Set the date and time manually

1. From the Clock screen, tap  > **Settings** > **Change date & time** > **Set time automatically**, slide the switch to the **Off**  position.
2. Tap **Set date** or **Set time** to set the date or time manually.







Create a new alarm

1. Tap **Alarm**  > .
2. Set the time for the alarm and tap **OK**.





World clock

1. Tap **Clock**  >  to access the World clock screen.
2. Type to enter a city name and select the city you want to add from the list. To remove a city, swipe the city to the left side.


Timer

1. Tap **Timer**  to access the Timer screen.
2. Enter the amount of time into the Timer.
3. Tap  to begin timing. Tap  to pause it.
4. Tap  to reset the timer back to previous set time. Tap  to delete the timer. Tap  to add another timer. Swipe up and down to view other active timers.

Stopwatch

1. Tap **Stopwatch**  to access the Stopwatch screen.
2. Tap  to begin the stopwatch. Tap  to stop it. Tap  to reset the stopwatch to zero. Tap  to add lap splits.

Bedtime

1. Tap **Bedtime**  to access the Bedtime screen.
2. Set your sleep time and wake-up time.

Your tablet will enter **Bedtime mode** during sleep time. In Bedtime mode, tablet notifications for calls, texts, and other interruptions will be turned off. And the tablet's display color will be turned into black and white to reduce the chance of you staying up and using your tablet. A wake up alarm will be set automatically to wake you up at the wake-up time you've set.

There are the following options for you to manage your sleep:

- **See recent bedtime activity:** Keep track of your screen time and see estimates of time spent in bed. This is based on when your tablet remained motionless in a dark room.
- **Listen to sleep sounds:** You can play soothing music to help you fall asleep. Sleep sounds don't play automatically.
- **See your upcoming events:** To make sure your alarm is set before any events, allow **Clock** to access your calendar.

Note: You can add **Bedtime mode** to the Quick Settings Panel to enable or disable this mode quickly and easily.


Useful settings

Languages

Set the language for the tablet's menus.

From the Home screen, swipe up to access **Apps** and tap **Settings > System > Languages**.

System languages

1. From the Languages screen, tap **System languages**.
2. View your languages.
 - When more than one language has been added, you can touch and hold the language, then drag it up to the first position to set as the default display language.
 - To add a language, tap **Add a language**, then select the language you want to add.
 - To remove a language, tap  > **Remove**.

App languages

1. From the Languages screen, tap **App languages**.
2. Set the language for each app.

Note: Not all apps on your device support this function.

Date & time

From the Home screen, swipe up to access **Apps** and tap **Settings > System > Date & time**.

Set time automatically

From the Date & time screen, slide the **Set time automatically** switch to the **On**  position to use network-provided time zone

Automatically use the time and date provided by a connected Wi-Fi network or GPS. Disable this function to enter the date and time manually.


Date

Set the date manually. This option is available only when the Set time automatically function is disabled.

Time

Set the time manually. This option is available only when the Set time automatically function is disabled.

Automatic time zone

From the Date & time screen, slide the **Set automatically** switch to the **On**  position to use network-provided time zone.

When Automatic time zone turned off, you can tap **Time zone** to manually select your time zone.

Use location

From the Date & time screen, slide the **Use location** switch to the **On**  position to use location to set the time zone.

Time zone

Manually select your time zone. This option is available only when the Automatic time zone function is disabled.

Use locale default

From the Date & time screen, slide the **Use locale default** switch to the **On**  position to use the default time format.

Use 24-hour format

From the Date & time screen, slide the **Use 24-hour format** switch to the **On**  position to enable the 24-hour time format.

Display


Use the tablet's Display settings menu to adjust items such as brightness, screen timeout, and more.

From the Home screen, swipe up to access **Apps** and tap **Settings > Display**.

Brightness level

1. From the Display screen, tap **Brightness level**.
2. Drag the slider to adjust the brightness level manually.

Adaptive brightness


1. From the Display screen, tap **Adaptive brightness**.
2. Slide the switch to the **On**  position to enable Adaptive brightness.
3. When turned on, your tablet will automatically adjust screen brightness based on the lighting conditions.

Lock screen


1. From the Display screen, tap **Lock screen**.
2. Manage what to show and when to show on the lock screen.

Screen timeout

1. From the Display screen, tap **Screen timeout**.

2. Set screen timeout interval. Your screen will automatically go to sleep after the set amount of time.
3. You can slide the **Screen attention** switch to the **On**  position to prevent your screen from turning off if you're looking at it.


Dark theme

From the Display screen, slide the **Dark theme** switch to the **On**  position to enable the dark theme.

Display size and text

1. From the Display screen, tap **Display size and text**.
2. Drag the sliders to adjust the font size and display size, slide the switches to enable bold text and high contrast text. You can also tap **Reset settings** to reset display size and text to tablet's original settings.

Night Light

From the Display screen, slide the **Night Light** switch to the **On**  position to enable Night Light. When enabled, you can set a Night Light schedule and intensity.


Color contrast

1. From the Display screen, tap **Color contrast**.
2. Choose the contrast that looks best for you.

Auto-rotate screen

From the Display screen, slide the **Auto rotate screen** switch to the **On**  position to enable screen rotation.


Smooth Display

From the Display screen, slide the **Smooth Display** switch to the **On**  position to automatically raise the refresh rate from 60 to 90 HZ for some content. Enabling this function will increase battery drain.

Screen saver

From the Display screen, tap **Screen Saver** to set the screen saver, adjust screen saver settings.

Lift to wake

From the Display screen, slide the **Lift to wake** switch to the **On**  position to turn on the tablet display by simply lifting your tablet from a table or removing it from your pocket.

Wallpaper & style

Change the wallpaper

1. From the Home screen, swipe up to access **Apps** and tap **Settings > Wallpaper & style**.

Tip: You can also access the Wallpaper & style menu from the Home screen. From the Home screen, touch and hold an empty space, then tap **Wallpapers & style**.

2. Tap **More wallpapers**, select the wallpaper from your photos or standard wallpapers folders.
3. Tap **Set wallpaper** at the top of the screen and choose to set the wallpaper on the Home screen, Lock screen, or both.

Change the color theme

1. From the Home screen, swipe up to access **Apps** and tap **Settings > Wallpaper & style**.
2. Tap **More colors** and choose desired color theme.
 - Tap **Wallpaper colors** tab and select the desired color combination which comes from the set home screen and lock screen wallpapers.
 - Tap **Other colors** tab and select the desired basic color.

Sound

Control your tablet's audio, from alerts to tap tones and notifications.

1. From the Home screen, swipe up to access **Apps** and tap **Settings**.
2. Tap **Sound**.
3. Drag the sliders to adjust the media, call, notification, and alarm volumes.

Do Not Disturb

1. From the Sound screen, tap **Do Not Disturb**.
2. Tap **Turn on now** to enable Do Not Disturb mode. Some notifications will be silenced when Do Not Disturb is turned on.
3. You can set What can interrupt Do Not Disturb, Schedules, etc.


Digital Wellbeing & parental controls

From the Home screen, swipe up to access **Apps** and tap **Settings > Digital Wellbeing & parental controls**.

Your Digital Wellbeing tools

From this menu, you can get info about how you spend time on your tablet, like how often you unlock it and how long you use each app. You can use that info to improve your digital wellbeing. For example, you can set app timers and schedule display

changes.

- **App limits:** Set time limits for your apps.
- **Bedtime mode:** Set a bedtime schedule to disconnect from your tablet and avoid interruptions while you sleep.
- **Focus mode:** Pause distracting apps when you need time to focus.
- **Screen time reminders:** Get gentle reminders when you're spending a long time in an app.
- **Manage notifications:** Enable or disable the notifications of apps.
- **Do Not Disturb:** Mute your device, but allow exceptions such as calls or texts from certain contacts.
- **Heads Up:** Prompt you to stop staring at your tablet while walking. Follow the steps to set up Heads Up feature.
- **Show icon in the app list:** Slide the switch to the **On**  position to enable icons in the app list.

Parental controls

Add content restrictions and set other limits to help your child balance their screen time. From the Digital Wellbeing & parental controls screen, tap **Set up parental controls**. Follow the screens to finish the setup.

Security & privacy

The Security & privacy settings will help you to secure your device, protect your data, and keep your privacy.

From the Home screen, swipe up to access **Apps** and tap **Settings > Security & privacy**.

Device unlock

Screen lock

You can set up a screen lock to help secure your tablet. Each time that you turn on your device or wake up the screen, you'll be asked to unlock your device.

1. From the Security & privacy screen, tap **Device unlock > Screen lock**.
2. Select one of the following options.
 - **None:** Disable any screen lock.
 - **Swipe:** Set swipe to unlock.
 - **Pattern:** Set an unlock pattern. Follow the prompts to finish the settings.
 - **PIN:** Set a PIN code as the screen unlock method.
 - **Password:** Set a password as the screen unlock method.

Face unlock

Unlock your tablet by looking at it.

Set up face authentication

1. From the Security & privacy screen, tap **Device unlock > Face unlock**.
2. Enter your pattern, PIN, or password.

Note: To add a face unlock, you must set your backup screen lock method first.

3. Keep your eyes open and make sure your face is fully visible and not covered by any object, such as a hat or sunglasses.

Unlock your tablet with your face

To unlock your tablet, press the **Power** key to light up the tablet screen and trigger Face unlock automatically.

Note: Face unlock is less secure than fingerprint or password. Someone who looks like you could unlock your tablet.

Extend unlock

Unlock your device automatically in certain conditions.

From the Security & privacy screen, tap **More security & privacy > Extend unlock**.

- **On-body detection:** Activate On-body detection feature. Your device will now be kept unlocked while it is on you.
- **Trusted places:** Add a trusted location where the device can remain unlocked.
- **Trusted devices:** Add a second device that keeps your device unlocked when it is nearby.

SIM lock

From the Security screen, tap **More security & privacy > SIM lock**.

- **Lock SIM:** Enable SIM card lock. SIM lock will require you to enter a PIN to use your device.
- **Change SIM PIN:** Change the PIN code.

About tablet

Access important tablet information, view legal and safety information, etc.

From the Home screen, swipe up to access **Apps** and tap **Settings > About tablet**.

Safety and use

We recommend that you read this chapter carefully before using your tablet. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein. Use of connected devices subject to Dish Wireless' Terms and Conditions.

Traffic Safety

Always obey the local laws and regulations addressing the use of wireless mobile devices and their accessories in the areas where you drive. The use of tablet while driving may be prohibited or restricted in certain areas.

Conditions of Use

Operational Warnings: Only use your device in accordance with local laws and regulations and obey all posted notices in public areas.

Do not attempt to disassemble your tablet. If you disassemble your tablet, the warranty will not apply.

Always handle your tablet with care and keep it in a clean and dust-free place.

Do not allow your tablet to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc.).

The manufacture's recommended operation temperature range is 0°C (32°F) to 45°C (113°F).

Use only batteries, battery chargers, and accessories which are recommended by the device manufacturer and its affiliates and are compatible with your tablet. The device manufacturer and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Please check local laws and regulations in your jurisdiction to learn how to best dispose of your tablet.



PROTECT YOUR HEARING

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

Privacy

Please note that you are responsible for using the audio and visual recording features of your device in a manner that respects applicable laws. We disclaim any liability for your use of these or other features of your device to collect data from or about individuals.

Legal Information

In order to provide you with better access to this important information, we've made the materials accessible from the tablet's Settings menu. Review these materials prior to using your tablet. To access the materials on your tablet, swipe up from the home screen, and tap **Settings > About tablet > Legal information**, and select a topic.

Regulatory Information (e-label)

Your tablet uses an electronic label (e-label) that provides regulatory information about your device. To view the regulatory information for this device, on the device, swipe up from the home screen, then tap **Settings > About tablet > Regulatory labels**.

Battery and Accessories

Observe the following precautions for battery use:

- Do not disassemble or open, crush, bend or deform, puncture, or shred.
- Only use the USB cable provided with the tablet or cables that bear the USB-IF logo or have completed the USB-IF compliance program.
- Do not modify, remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion, or other hazards.
- Only use the battery with a charging system that has been qualified with the system per CTIA Certification Requirement for Battery System Compliance to IEEE1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazards.
- Replace the battery only with another battery that has been qualified with the system per this standard: IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage, or other hazards. Only authorized service providers shall replace battery if the battery is not user-replaceable.
- Promptly dispose of used batteries in accordance with local regulations.
- Improper battery use may result in a fire, explosion, or other hazards.
- Do not replace an embedded battery pack. Improper replacement may present a risk of fire, explosion, leakage, or other hazards. Contact the manufacturer for replacement instructions.
- The device identifies the battery by the Battery ID Pin.

Products that have the below symbol must be taken to collection points at the end of their life:



Municipal waste disposal centers with specific bins for these items of equipment.

Collection bins at points of sale.

You can learn more about how to recycle your tablet by visiting the CTIA website at www.ctia.org/news/how-to-recycle-your-mobile-device.

CAUTION: IF BATTERY IS REPLACED BY AN INCORRECT TYPE, DEVICE MIGHT EXPLODE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTION.

Chargers

Home A.C./Travel chargers will operate within the temperature range of: -10°C (14°F) to 40°C (104°F).

The chargers designed for your tablet meet with the standard for safety of information technology equipment and office equipment use. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction.

This product should be operated only with the following designated power supply unit(s).

Travel charger:

Input:

- 100-240V, 50/60Hz, 0.5A.

Output:

- 5V/3A 15W, or
- 9V/2.22A 20W, or
- 12V/1.67A 20W.

 **Warning: Cancer and Reproductive Harm - www.P65Warnings.ca.gov.**

Licenses



The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Device Manufacturer and its affiliates is under license. Other trademarks and trade names are those of their respective owners.



The Wi-Fi Logo is a certification mark of the Wi-Fi Alliance.

Regulatory agency identifications

FCC Regulations

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: ① This device may not cause harmful interference, and ② this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information (SAR)

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. The exposure standard for wireless mobile devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

The highest SAR value for the model device as reported to the FCC when worn on

the body, as described in this user guide, is 1.17 W/kg (Body-worn measurements differ among device models, depending upon available accessories and FCC requirements.)

While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model device is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: XD6T715DS.

For body-worn operation, this device has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and positions the handset a minimum of 0 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the device at the ear, position the handset a minimum of 0 cm from your body when the device is switched on.

Warranty

With this manufacturer’s warranty (“Warranty”), TINNO USA INC. (“Manufacturer”) guarantees this product against any material, design and manufacturing defects. The duration of this Warranty is specified in article 1 below.

This Warranty does not affect your statutory rights, which cannot be excluded or limited, in particular in relation to the applicable legislation on defective products.

Warranty duration

The product may consist of several parts, which may have separate warranty periods, to the extent permitted by local laws. The “Warranty Period” (as defined in the table below) takes effect on the date of delivery of the product (as indicated on the proof of purchase).

1. Warranty period (see table below):

Tablet	24 Months
USB Cable and Charger	12 Months
Other Accessories (if included in the box)	12 Months

2. Warranty period for repaired or replaced parts:

Subject to special provisions of local laws in force, the repair or replacement of a product does not, under any circumstances whatsoever, extend the original warranty period of the product concerned. However, the repaired or replaced parts are guaranteed in the same manner and for the same defect for a period of ninety days after delivery of the repaired product, even if their initial warranty period has expired. Proof of purchase required.

Implementation of the Warranty

If your product is faulty under normal conditions of use and maintenance, in order to benefit from the present warranty, please contact the Manufacturer support center via its website (www.tinno.us/support) or by calling (855) 945-6872. The Manufacturer support center will then provide you with instructions on how to return the product for support under warranty.

Warranty exclusions

Manufacturer guarantees its products against material, design and manufacturing defects. The Warranty does not apply in the following cases:

1. Wears and tears of the product (including on camera lenses, batteries and screens) requiring periodic repair and replacement.
2. Defects and damages due to negligence, to the product being used other than in a normal and customary manner, to noncompliance with the recommendations of the Manufacturer’s user guide, or to an accident, regardless of the cause. Instructions for use and maintenance of the product can be found in the Manufacturer’s user guide.

3. The opening, unauthorized disassembly, modification or repair of the product by the end user or by persons or by service providers not approved by Manufacturer and/or with spare parts not approved by Manufacturer.
4. Any failure, defect, or malfunction caused by use of the product with accessories, peripherals and other products whose type, condition and/or standards do not meet the Manufacturer's requirements.
5. Any failure, defect, or malfunction caused by the use or connection of the product to equipment or software not approved by Manufacturer. Some defects may be caused by viruses due to unauthorized access by yourself or by a third party service, computer systems, other accounts or networks. This unauthorized access may take place through hacking, misappropriation of passwords or various other means.
6. Defects and damage due to the exposure of the product to humidity, extreme temperatures, corrosion, oxidation, or to any spillage of food or liquids, chemicals and generally any substance likely to alter the product.
7. Any failure, defect, or malfunction caused by services and applications downloaded or otherwise installed by end user that have not been either developed, recommended, or pre-installed by Manufacturer and whose functioning is the exclusive responsibility of their designers.
8. Installation and use of the product in a manner that does not comply with the technical or security standards of regulations in force in the country where it's installed or used.
9. Modification, alteration, degradation or illegibility of the IMEI number, serial number or EAN of the product.

Upon expiration of the warranty period or upon an exclusion of warranty, Manufacturer may, at its discretion, provide a quote for the repair and offer to provide support for the product, at your cost.

The Manufacturer contact and after-sales service details are subject to change; the most recent information is available on www.tinno.us/support.